

W410A

WDAS

Wireless Data Acquisition and Control System

W410A

User's Manual

Ver 2.0

SEBINE Technology, Inc.

W410A

CONTENTS

- 1. Summary
 - 1.1 Product Introduction
 - 1.2 Specification
 - 2. Operation Mode
 - 2.1 PC MODE
 - 2.2 DEVICE MODE
 - 3. Device Connection
 - 3.1 Power Supply
 - 3.2 Digital Input Connection
 - 3.3 Antenna Connection
 - 4. Environment Setup
 - 4.1 Hardware Connection
 - 4.2 Setup List of Each Mode
 - 5. Examples
-
- Appendix 1. Dimension
 - Appendix 2. R&TTE
 - Appendix 3. Document Information

W410A

1. Summary

1.1 Product Introduction

W410A is one of WDAS(Wireless Data Acquisition and Control System) products and it acquires the digital input data from the actual field. It is a wireless data transmitter-receiver by using 433MHz RF frequency bandwidth. W410A allows users to set PC MODE, DEVICE MODE, and communication channels via environment setting. Usable frequency number, channel number, and serial number are printed in shipping products.

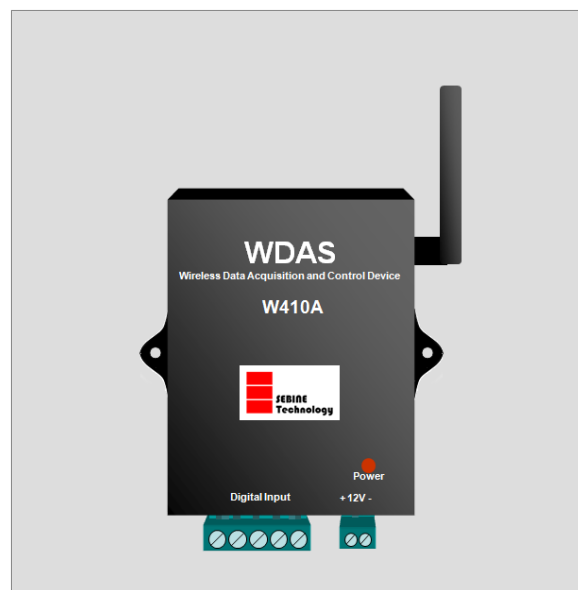


Figure 1. W410A

W410A

1.1.1 Application examples

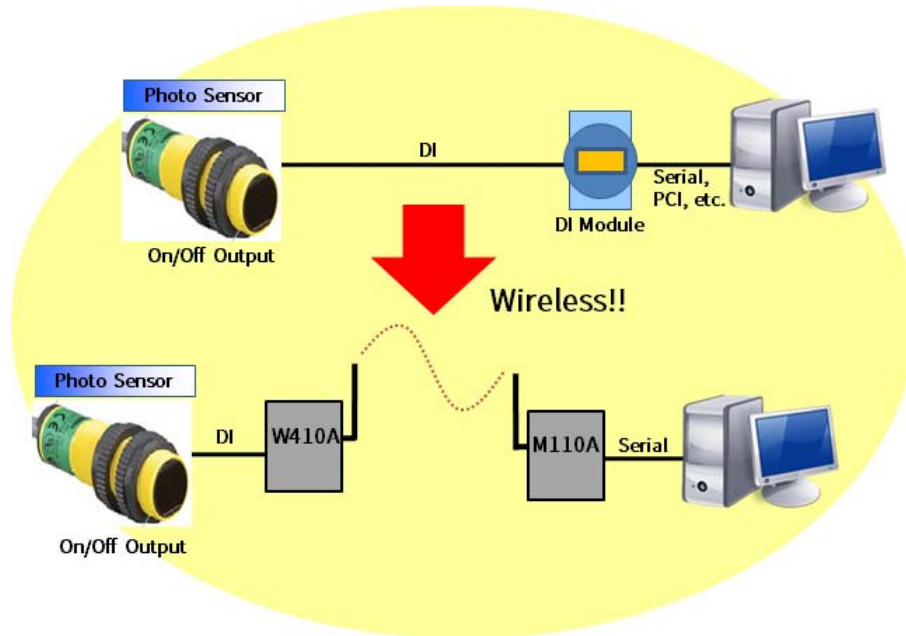


Figure 2. On/Off Status Wireless Transmission by W410A and M110A

1.1.2 Product usage

- Cable system replacement : Maintenance difficulty with cables is solved
- Hard environment for cable installation : Environment that requires long and complicated cable installation is solved
- Uneasy area for data acquisition by cable : Outdoor tank monitoring system

1.1.3 Product application area

- Pump, pipeline, liquid flow monitoring system
- Tank level, temperature monitoring system
- Poison gas detection and monitoring system
- Weather data (rainfall, wind direction, wind velocity, humidity, temperature) monitoring system

1.1.4 Product parts

W410A main body, one $\lambda/4$ dipole antenna, one power connector, one Digital Input connector

W410A

1.2 Specification

Item	Specification	
Name	W410A	
Dimension	85mm(L)×88.1mm(W)×19.6mm(H) (w/o Antenna, Connector)	
Housing	Aluminum	
Weight	180g (w/o Antenna)	
Power Supply	+12Vdc ±10%, Reverse Power/Overvoltage/Overcurrent Protection	
Current Consumption	Rx 86mA Tx 91mA WDT Reset 94mA (@12Vdc)	
Operating Temperature	-10°C ~ +60°C	
RF Features	<ul style="list-style-type: none">. Frequency : 433.050MHz ~ 434.790MHz. Channel Spacing : 25KHz. Transmitter Power : 10mW. Receiver Sensitivity : -116 ~ -120dBm(-116dBm typ.). Modulation : FSK. Bandwidth : < 14KHz	
Performance	<ul style="list-style-type: none">. Expected Line-Of-Sight Range : Up To 1.5km with $\lambda/4$ Dipole Antenna. RF Data Rate : 4.8K Baud, 7.2K Baud	
I/O Interface	Digital Input	4Ch. Opto-Isolated Input : Up To 2500Vrms Max. 50mA for Each Channel
Antenna Interface	<ul style="list-style-type: none">. SMA Connector. Impedance 50Ω	

Table 1. W410A Specification

W410A

2. Operation Mode

W410A allows PC MODE and DEVICE MODE for users' personal need. Function Code and its functionality is restricted based upon selected mode. Refer the Programmer guide for detailed protocol and Function Code.

2.1 PC MODE

2.1.1 Definition of PC MODE

Through M110A(PC MODE), W110A(Only PC MODE) with serial port, W410A execute the command when valid Function Code is received.

- Valid receiver Function Code : READ

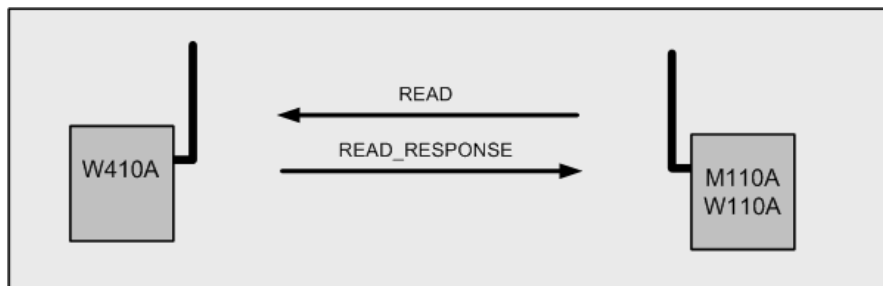


Figure 3. PC MODE of W410A

2.1.2 Function Code available at PC MODE

- READ : Through M110A(PC MODE), W110A(Only PC MODE) with serial port, current digital input status is read when W310A receives Function Code of inquiry of digital input status.
- READ_RESPONSE : Function Code of READ_RESPONSE is used when READ Function Code is received and current digital input status is transmitted.

2.1.3 Environment setting list before PC MODE use

- Select PC MODE at PC/DEVICE MODE Setting

W410A

2.2 DEVICE MODE

2.2.1 Definition of DEVICE MODE

Established DESTINATION device transmits current digital input status according to set period.

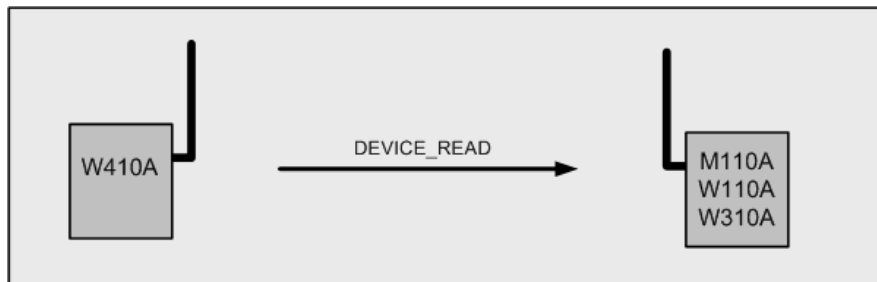


Figure 4. DEVICE MODE of W410A

2.2.2 Function Code available at DEVICE MODE

- DEVICE_READ : When the established DESTINATION device transmits current digital input status according to set period, Function Code of DEVICE_READ is used.

2.2.3 Environment setting list before DEVICE MODE use

- DEVICE MODE selection at PC/DEVICE MODE Setting
- DESTINATION ID set up at DESTINATION ID Setting
- TX Period Set up at Period Setting

W410A

3. Device Connection

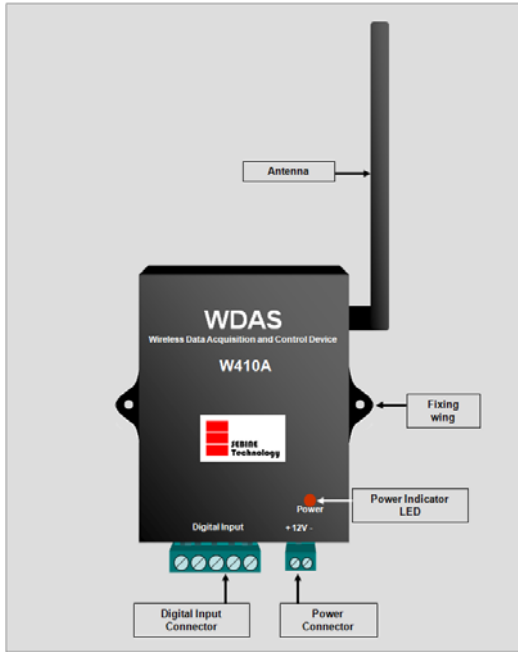


Figure 5. W410A Outer

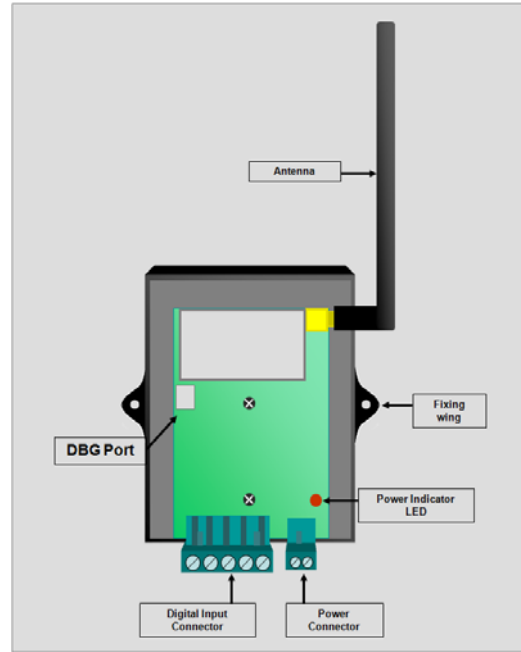


Figure 6. W410A Inner

W410A

3.1 Power Supply

W410A works at +12Vdc and equipped with Reverse Power / Overvoltage / Overcurrent Protection circuitry. Power is supplied by power connector provided at product purchase as shown in figure below. W410A has no external power switch and it becomes in working mode when the power is supplied. If normal power is supplied, power supply indicator LED is on.

- As shown in Figure 7, remove the skin of wire about 7mm and put it into the terminal and tighten it by turning the left screw using screwdriver.
- As shown in Figure 8, connect it to power.
- As shown in Figure 9, connect the terminal to power port of W410A, Make sure the direction is exact as shown in Figure 9.

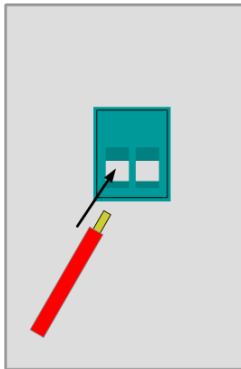


Figure7. Power Supply-1

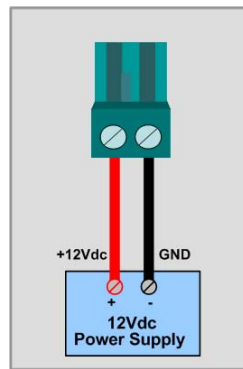


Figure8. Power Supply-2

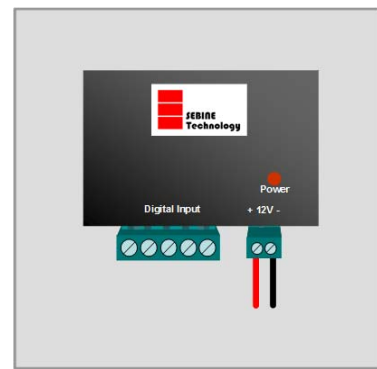


Figure9. Power Supply-3

※ Notice

Readily accessible disconnect device shall be incorporated external to the equipment.

W410A

3.2 Digital Input Connection

W410A supports 4 channel digital input. For use of digital input function, Digital Input/Output connector is used shown in Figure 5.

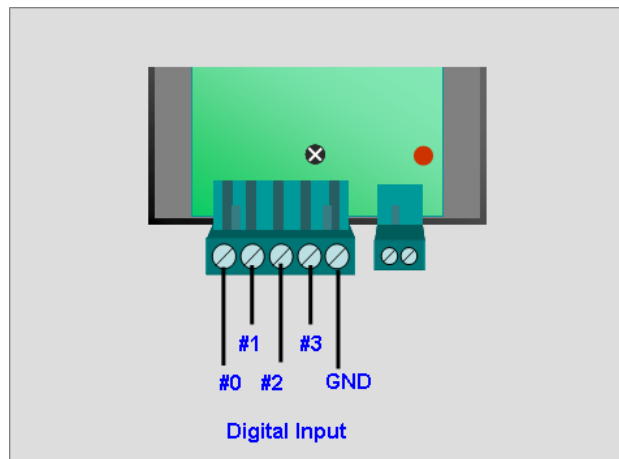


Figure 10. W410A connector

3.2.1 Digital input channel connection

Digital input circuit of W410A is shown in Figure 11. Refer the circuit below for digital input channel connection.

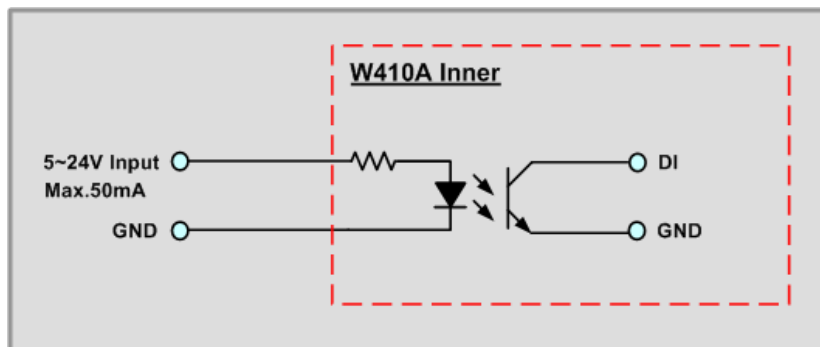


Figure 11. Digital input channel concept

W410A

3.3 Antenna connection

Connect the SMA-P(male) connector antenna to SMA-J(Female) connector of W410A. At purchase, $\lambda/4$ dipole antenna is provided.



Figure 12. SMA-J Antenna connector

W410A

4. Environment setup

Environment setup can be made through SetModemEnv.exe program. For details, consult the corresponding manual.

4.1 Hardware connection

Use DBG port for PC connection shown in Figure 6.

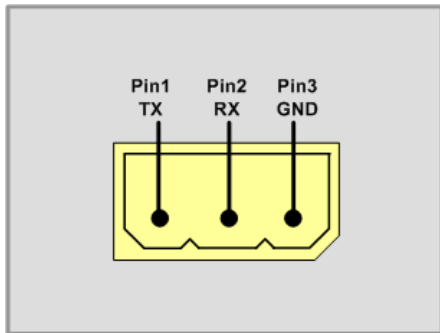


Figure 13. Hardware connection-1(W410A)

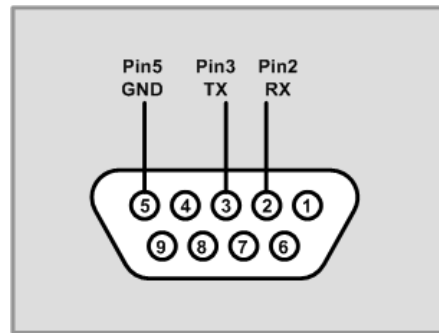


Figure 14. Hardware connection-2(PC)

For communication frequency adjustment, port and PC must be connected via serial communication program as shown in Figure 13.

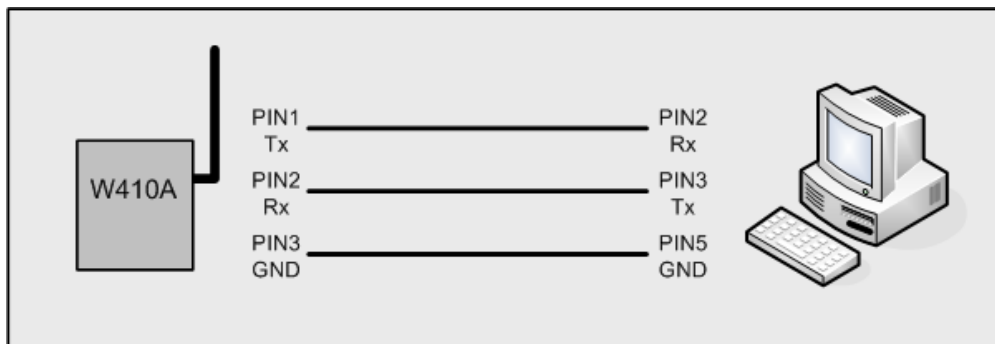


Figure 15. Hardware connection-3

The hardware connection between W410A and PC can be done as shown in Figure 15.

4.2 Setup list of each mode

4.2.1 PC MODE

- PC/DEVICE MODE Setting : PC MODE Setting
- Channel Setting : Communication Frequency Setting
- Tx Power Level Setting : Communication RF Power Level Setting

W410A

4.2.2 DEVICE MODE

- PC/DEVICE MODE Setting : DEVICE MODE Setting
- Channel Setting : Communication Frequency Setting
- Tx Power Level Setting : Communication RF Power Level Setting
- DESTINATION ID Setting : DESTINATION ID Setting
- Period Setting : TX Period Setting

4.2.3 Environment Setting Program

1) PC/DEVICE MODE Setting(MODE Setting)

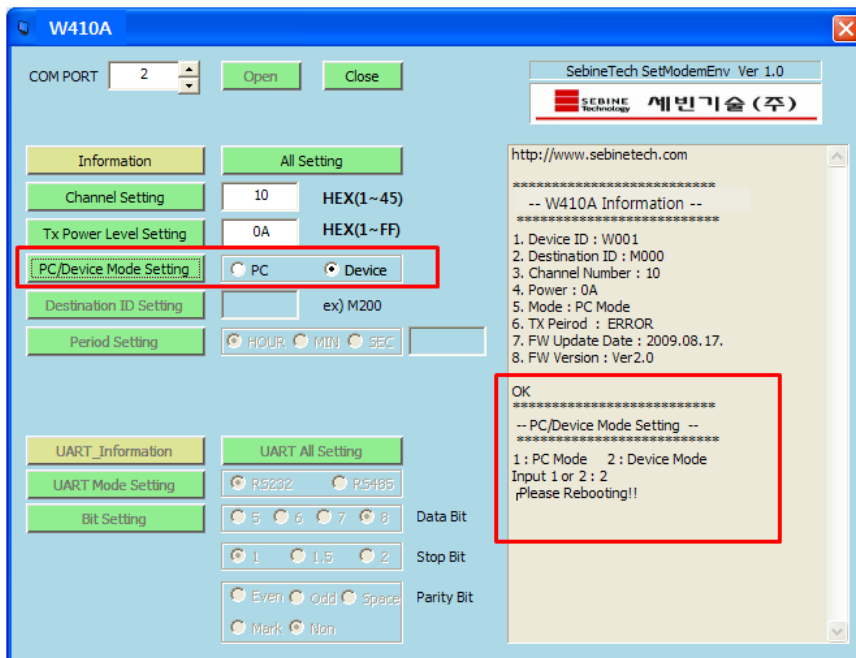


Figure 16. Environment Setting Program-MODE Setting

W410A

2) Channel Setting(Communication Frequency Setting)

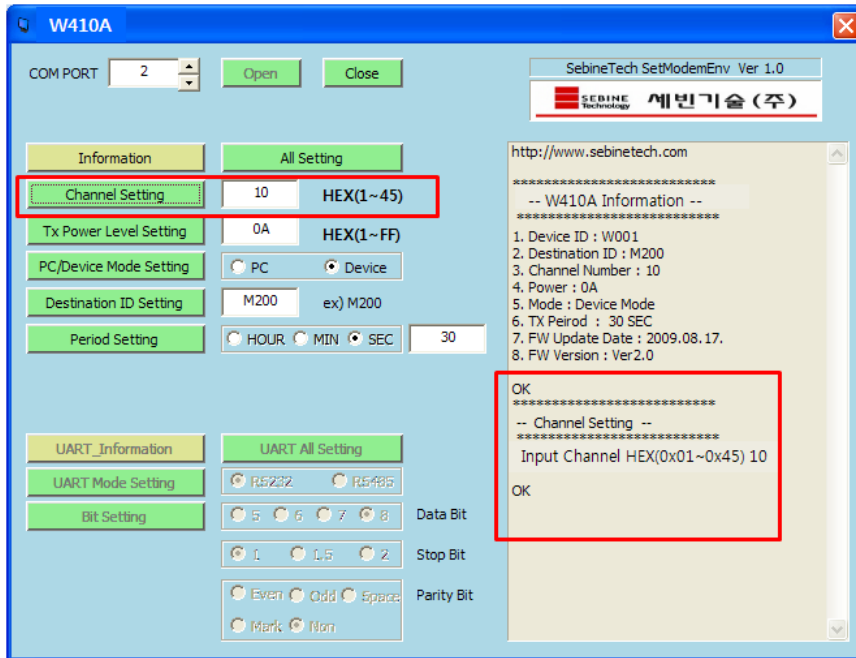


Figure 17. Environment Setting Program-Channel Setting

3) Tx Power Level Setting(Communication RF Power Level Setting)

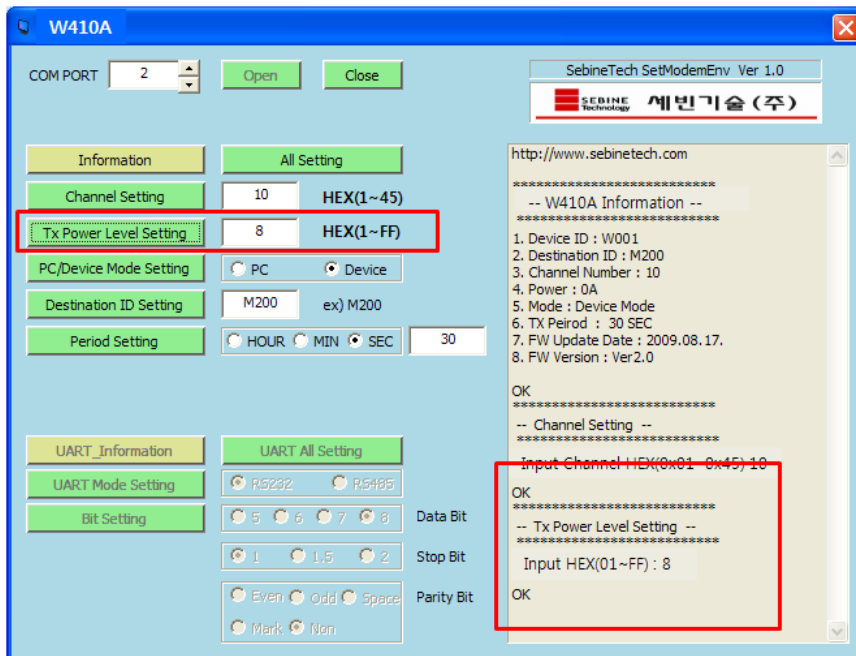


Figure 18. Environment Setting Program-Tx Power Level Setting

W410A

4) DESTINATION ID Setting(DESTINATION ID Setting)

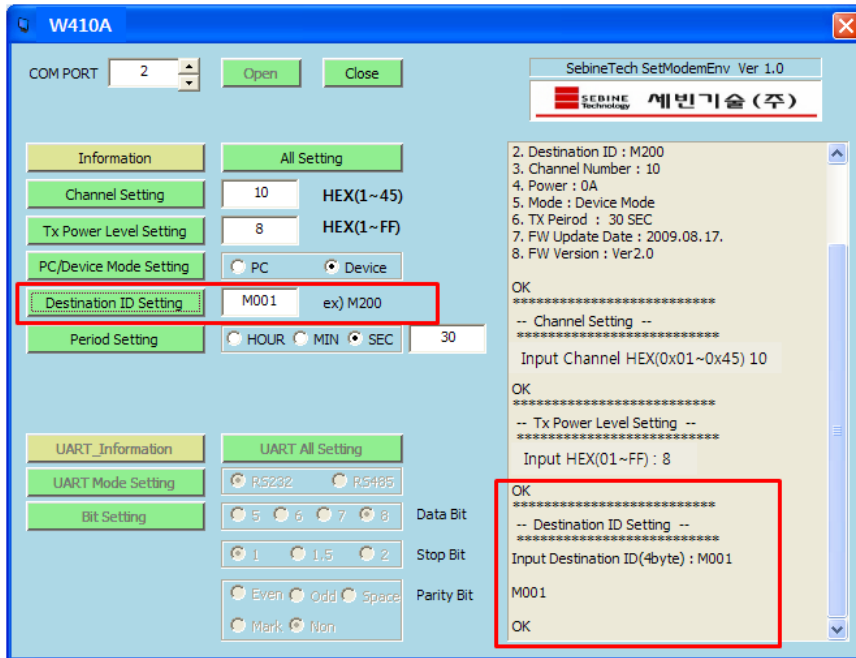


Figure 19. Environment Setting Program-DESTINATION ID Setting

5) Period Setting(TX Period Setting)

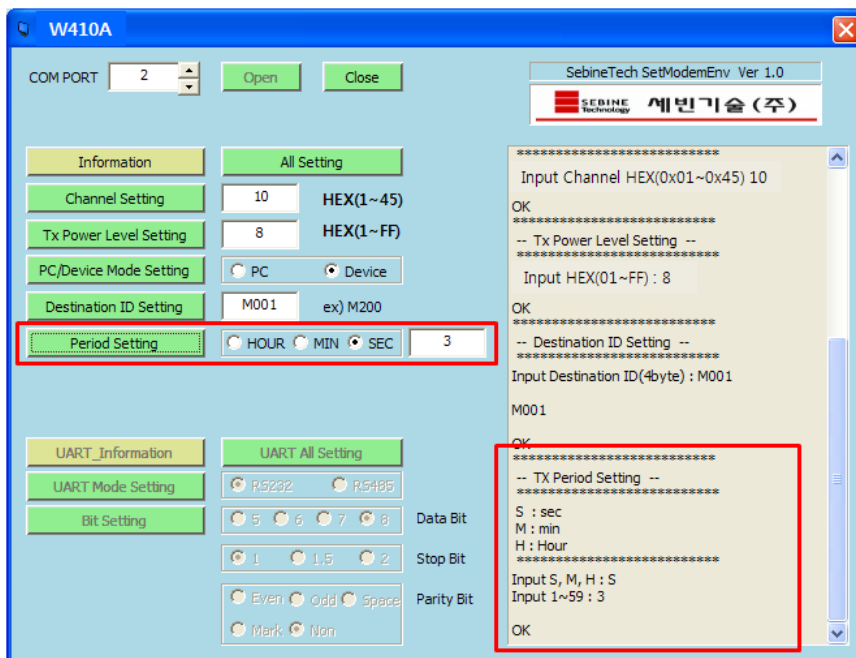


Figure 20. Environment Setting Program-Period Setting

W410A

5. Examples

(EX 1) W410A(PC MODE) to M110A(PC MODE) Communication

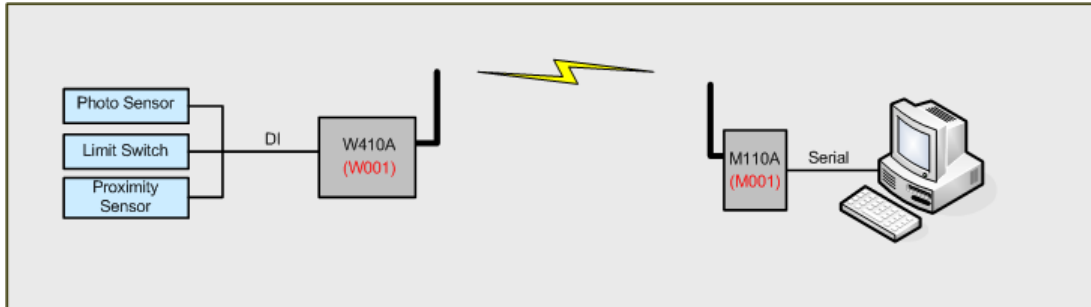


Figure 21. W410A to M110A Communication Example

(EX 2) W410A(DEVICE MODE) to W310A(PC MODE) Communication


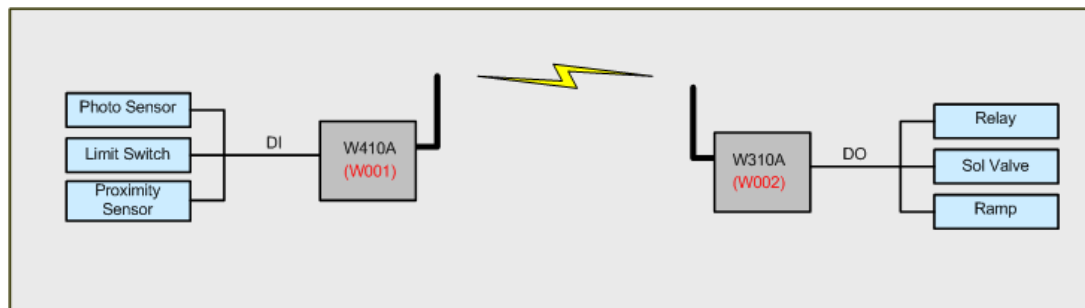



Figure 22. W410A to W310A Communication Example

W410A


Appendix 1. Dimension

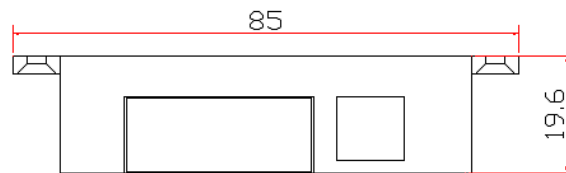

BOTTOM

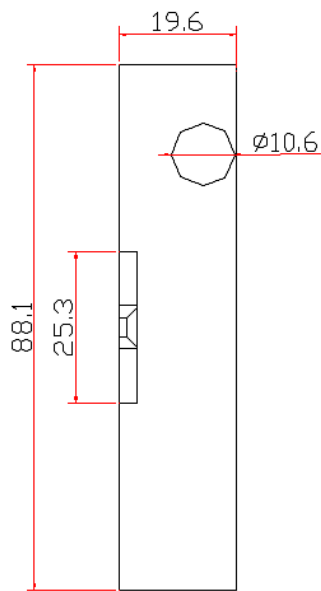

SIDE

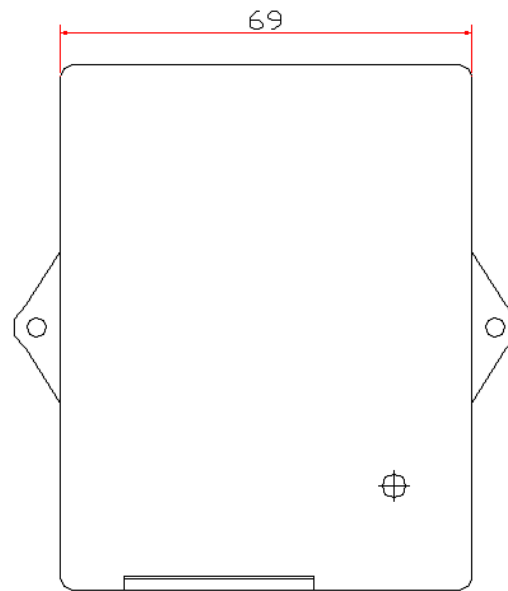

FRONT

W410A

Appendix 2. R&TTE

Hereby, SEBINE Technology, Inc. declares that this device(M/N:W410A) is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

W410A

Appendix 3. Document Information

Revision	H/W Version	Description
1.0	RF1-AE-DI Ver1.0	03/30/2009 - Initial Release Version
2.0	RF1-AE-DI Ver1.0	09/14/2009 - Modified

W410A

SEBINE Technology, Inc.

Homepage : www.sebinetech.com

E-mail : tech@sebinetech.com

#8-116, 187, Techno 2-ro, Yuseong-gu, Daejeon, Republic of Korea 34025
(Migun Technoworld 2, Yongsan-dong)

Tel : 82-42-935-2084, 2085

Fax : 82-42-935-2088